
QUICK REFERENCE GUIDE

KB Document #8308

MITEL

5304 IP Phone

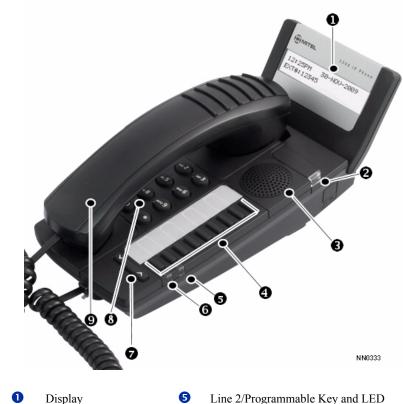

0 Ring/Message Indicator B Speaker

Programmable Keys

4

- Line 1 Key and LED 6
 - Volume, Speaker, and Contrast Controls
- 8 Keypad
- 9 Handset



0

NOTE: Your system administrator can program function or feature keys on the programmable keys. For more information about using programmable keys and other features on your 5304 IP Phone, refer to 5304 IP Phone User Guide located at http://edocs.mitel.com or contact your administrator.

Make a Call

- 9 Lift the handset.
- 8 Dial number, or
- **4** Press a programmed **Speed Call** key, or
- **4** Press the programmed **Redial** key.

Answer a Call

- 9 Lift the handset, or
 - If the handset is already off hook, press the flashing line key **5** or **6**.

End a Call

9 Replace the handset.

Place a Call on Hold

- **4** Press the programmed **Hold** key.
- The LED next to the held line number will flash.

Retrieve a Call from Hold

5 or **6** Press the flashing line key.

Retrieve a Message

- 9 Lift the handset
- 8 Dial the voicemail number, or
- **4** Dial the programmed **Message Waiting** Indicator key.

Follow the prompts to retrieve your message.

Transfer a Call

- Press the programmed **Transfer**/ **Conference** key, and then dial the transfer destination number.
- 9 Hang up when you hear ringing, or wait for an answer, announce the call, and then hang up.

Conference Calls

First call is established

- 4 Press the programmed Transfer/ Conference key.
 - Dial the number of the third party when vou hear dial tone. Wait for an answer
- 4 Press the programmed Transfer/ Conference key.

Adjust Handset or Speaker Volume

9 Lift the handset



repeatedly.

Speaker volume is changed if a paging call is playing.

Adjust Ringer Volume



